

➔ Introduction:

Skype™ is free Internet telephony, provided by Skype Technologies S.A., that offers the people PC-to-PC (free) and PC-to-Phone (pretty cheap) calls all over the world with the superior quality voice via its next-generation peer-to-peer software.

With BoxSkyfree you can enjoy the Skype™ service like the regular phone calls.

You can learn about the latest product information and/or download the latest driver for Skype from the web-site www.voip-skyfree.com.tw.

➔ Features:

- ▣ Operate Skype™/SkypeOut™ calls with phone keypad and ringing on incoming calls.
- ▣ Built-in sound card and driver supporting USB Ver. 1.1 with USB HID and USB Audio allows use as speaker/microphone for any internet telephony software.
- ▣ Full duplex and echo-free communication
- ▣ Crystal clear sound quality
- ▣ No external power required
- ▣ Enjoy internet phone calls like using the regular phone.
- ▣ Use a normal telephone to make/receive internet phone calls and PSTN phone calls simultaneously.
- ▣ Easy to use

➔ Specifications:

- ▣ One USB interface to PC
- ▣ One RJ11 interface to PSTN
- ▣ One RJ11 interface to normal phone
- ▣ USB, PSTN LINE and POWER LED indicator

➔ System Requirements:

- ▣ Windows 98SE/ME/2000/XP
- ▣ Pentium II 233MHz or Higher
- ▣ RAM 32MB or Higher
- ▣ Free USB Port
- ▣ Available Internet Connection

➔ How to Work with Skype™:

Run Skype

- ▣ Download Skype software and install it (www.skype.com), the version must be 1.0.0.106 or higher.
- ▣ Run Skype and log in with Skype account.




You can create a Skype account as shown below:



After the software startup, the icon will appear to the system tray as shown below:



That indicates the Skype has successfully connected to Internet.

If it hasn't connected to Internet, the icon will be shown as , you have to check whether PC is connected to Internet successfully or not.

 
Connect USB Telbox to PC

- ▣ Connect USB Telbox to PC with USB cable in package, POWER indicator will be on.

- ▣ Plug PSTN line into "LINE" port.
- ▣ Connect phone to "TEL" port with the RJ11 cable enclosed in the package.

Run Skyfree on CD

- ▣ Install the driver Skyfree from the CD enclosed in the package.
The Skype program will pop up the window as shown below:

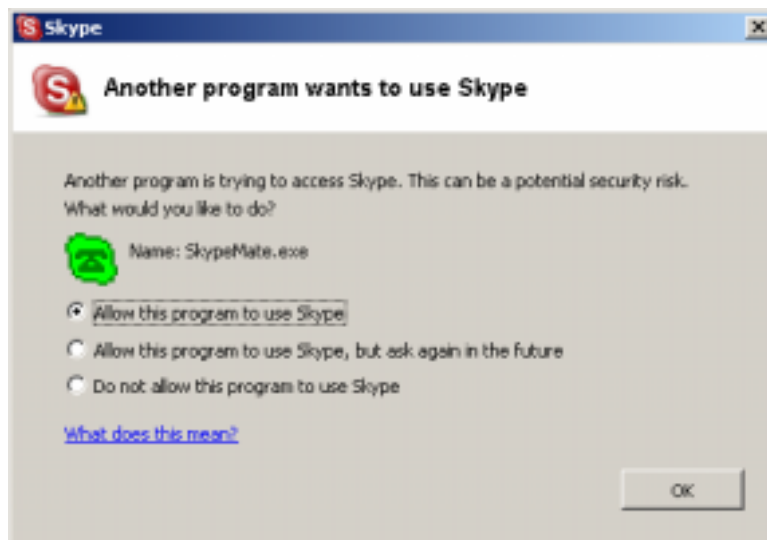

Select the first item "Allow this program to use Skype", click "OK" button.


Note: If you selected the wrong item, you can execute "File->Options-> Privacy-> Manage other programs' access to Skype->Change->OK" to open the window as above to make the correct selection again.

After running Skyfree, the icon will appear to the system tray as shown below:



That indicates the device and Skype are connected successfully.

If the icon is shown as , please run Skype first.

If the icon is shown as , it means the USB Telbox is connected incorrectly, please reconnect USB Telbox to PC.

Note: When Skyfree startup, the default channel is PSTN.

 
Channel Switch

You can press "*" to switch PSTN channel to USB channel and vice versa.

Make calls through USB

Call another Skype user (PC to PC)

- ▣ Add a Skype mate to Contacts
- ▣ Assign Speed-Dial for it, for example "11"

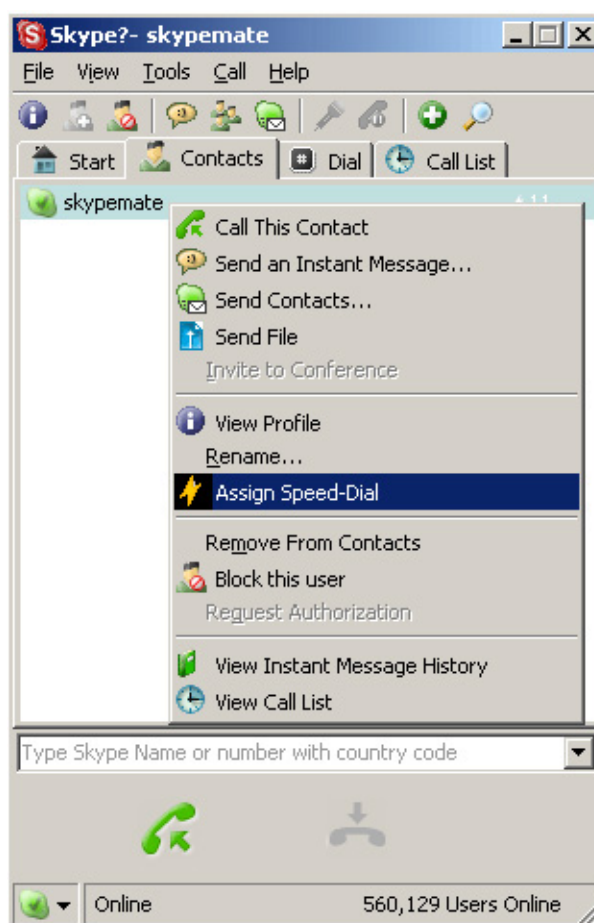

- Input number and call out:

Pick up the handset and then press “*” to change to USB channel, the "USB" indicator is on.

Press digital "1" and "1" on the phone, this number will be shown on the addressbar in Skype window,

Press “#” to call out.

When you hang up the phone, the USB Telbox will switch to the PSTN (default) channel automatically.

Call to regular phone (PC to Phone)

Pick up the handset and then press “*” to change to USB channel, the "USB" indicator is on.

Pressing "00"+"country number"+"phone number"

Press "#" to start the SkypeOut.

For Example: call to Taipei, Taiwan, press 00886212345678, then press “#”.

00886	2	12345678
-----	-----	-----
country code	city code	telephone number

Note: If you want to use this function, you should buy SkypeOut Credit first.

Make calls through PSTN (Phone to Phone)


Pick up the handset and dial the telephone number to call out.

Note: If the default channel is USB, you have to press “*” to change to LINE first.

Answer a call

When the phone is ringing on an incoming call, pick up the handset or press hand-free key to answer the call.

Adjust options (volume and default channel)

Double-click the  on the taskbar, then you can adjust the volume and the default channel.


➔ FAQ:

Problem 1

The voice is coming through the PC's sound card instead of the phone when I make/answer a Skype call.

Resolution

 
Open the main window of Skype, click on “File->Options”, and go to the table **Hand/headsets**, set **Audio In**, **Audio Out** and **Ringin**g all to the **USB Audio Device**.

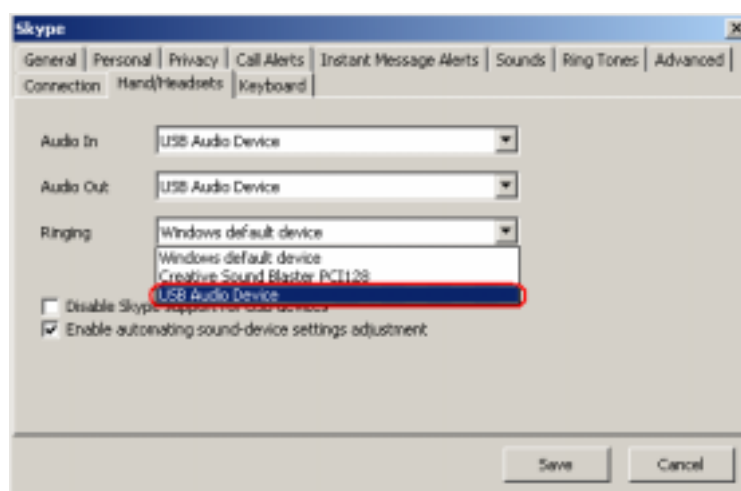


Problem 2

There is no voice coming out of speakers when playing music.

Resolution

 Please execute the “Control Panel->Sound and Video ()->Audio”, set **Sound Playback** and **Sound Recording**'s Preferred device to your sound card, it is shown as below:

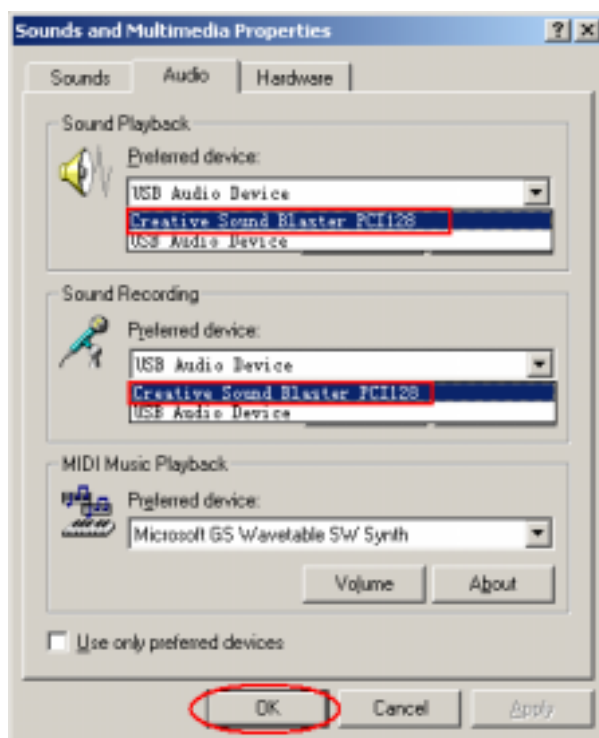

Problem 3

Skype has been startup, but the icon of Skyfree still is shown as .

Resolution

Maybe you selected the wrong item, you can execute "File->Options->Privacy-> Manage other programs' access to Skype->Change->OK" to open the window as below, and select "Allow this program to use Skype".

