



**Mouse Remote Controller
User Manual**

I. The general appearance of the remote control



II. The general appearance of the receiver



III. The main function and features

1. Wireless mouse function;
2. Multimedia control function;
3. Page up/down function;
4. Internet explorer function;
5. Number input function
6. Power off function

IV. How to setting up?

Plug the USB receiver into the computer's USB port, the computer will search the new hardware and finish the setting of the driver system. (Notice: Windows98/SE operation system need the system disc. please don't Place any object before the receiver to affect the function of receiver.).

V. Operation system

Windows98/ME/2000/XP, Mac OS, Linux, Windows Vista

VI. The detail function of all keys

(Notice: the following functions are finished in Windows XP Professional, the other operation system will more or less different.)

Key icon/illustration	Operation condition	functions	Corresponding keyboard shortcuts
power off	Any condition	Power off the computer	
my computer	Any condition	Open "my computer" window	+E
X /Close	Any condition	Close the currently window or the application	ALT+F4
/Start	Any condition	Open "start" menu; press again to escape the menu.	/Ctrl+E SC
/Refresh	IE browser, my computer	Reload the current window's content	+F

/Search	1.Any condition except IE browser	Open "Search" dialog box.	Ctrl+F
	2.IE browser	Open "search:search internet" dialog box	
/Homepage	IE browser, my computer	Open homepage in the default IE browser	
/Favorite	IE browser, my computer	Open Favorite	
/back	IE browser, my computer	Back to the last page	ALT+←
/forward	IE browser, my computer	Forward to next page	ALT+→
/Email	Any condition	Open Outlook Express	
"+" /Volume up	Any condition	Increase the volume of the computer	
"-" /Volume down	Any condition	Decrease the volume of the computer	
/Mute	Any condition	Mute the computer	
0-9/number 0-9	Notepad, password box	Input the number you press	0-9 number key
	Press without releasing	Input the number continuously	0-9 number key
/Enter	Any condition	Enter a newline/open the file	Enter
/Delete	Text box/password box	Delete the words	

	Press without releasing	Delete the word continuously	Delete
▶▶/Play/Pause	Windows Media Player	Play/pause	
■/Stop	Windows Media Player	Stop playing	
▶▶▶/Speed	Windows Media Player	5times forward than normal play, press again will back to normal play	
◀◀ /Quick recede	Windows Media Player	5times recede than normal play, press again will back to normal play	
▶▶/next	Windows Media Player	Play next document	
◀◀/previous	Windows Media Player	Play previous document	
▲, ▼, ◀, ▶	Any condition	Move the mouse pointer	
	Press without releasing	Move the mouse pointer quickly	

OK	Any condition	Select the place of mouse cursor and the receiver's LED will bright long, this operation just like press the left key of the mouse continuous . Press again will cancel the select, and the receiver's LCD will power off	
L	Any condition	Mouse left button	
R	Any condition	Mouse right button	
▲/Page up	Any condition	Page up	Page up
▼/Page down	Any condition	Page down	

VII. Technology parameter

remote controller	
Control distance	>15m
Battery	AAA*2
Working voltage	2.4~3.5V
Sleep current	1uA
product size:	185*51*28mm
weight:	120g
Receiver	
Hard ware:	IBM PC/AT&Notebook, Apple
Operation system:	Windows98/SE/ME/2000/XP/Linux,Mac/Windows Vista
Compatible port	USB1.1 USB2.0
Working voltage	USB power supply(4.5-5.5v)
product size	48*20*20mm
Weight:	36g

VIII. Troubleshooting

1. Q: why don't have reaction when press the button in remote controller?

A: ① Please check that whether the USB receiver was connect to the computer's USB port correctly, and no object before the USB receiver

②Some keys need in the correspondence operation system, please Use it accord to the "detail function of all keys"

③Please check if the battery of remote controller was fix correctly, power enough or not, please change the battery if in need.

2. Q: Why the quick recede can't recede when I use Windows media player play the media document?

A: Because the Windows media player don't support recede order, you only can use the mouse to drag the speed bar to select the recede play time.

3. Q: Why the computer came into sleeping condition when I press the button of the power off?

A: This was caused by your computer setting, please select in order, Start-setting-Control panel—power selection—Senior— then press the computer's power button" below selection, then select the power off is ok.